


Illustration A


Crankcase, Cylinder

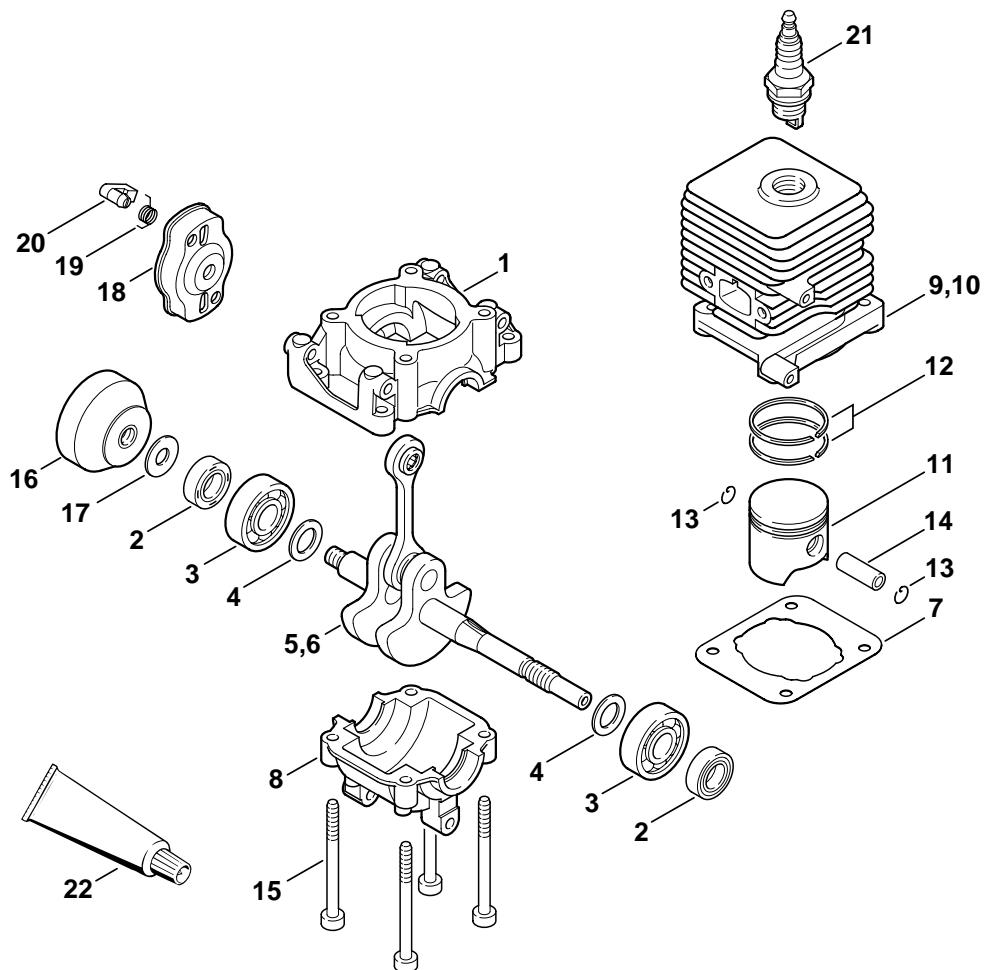

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

Illustration B


Rewind starter

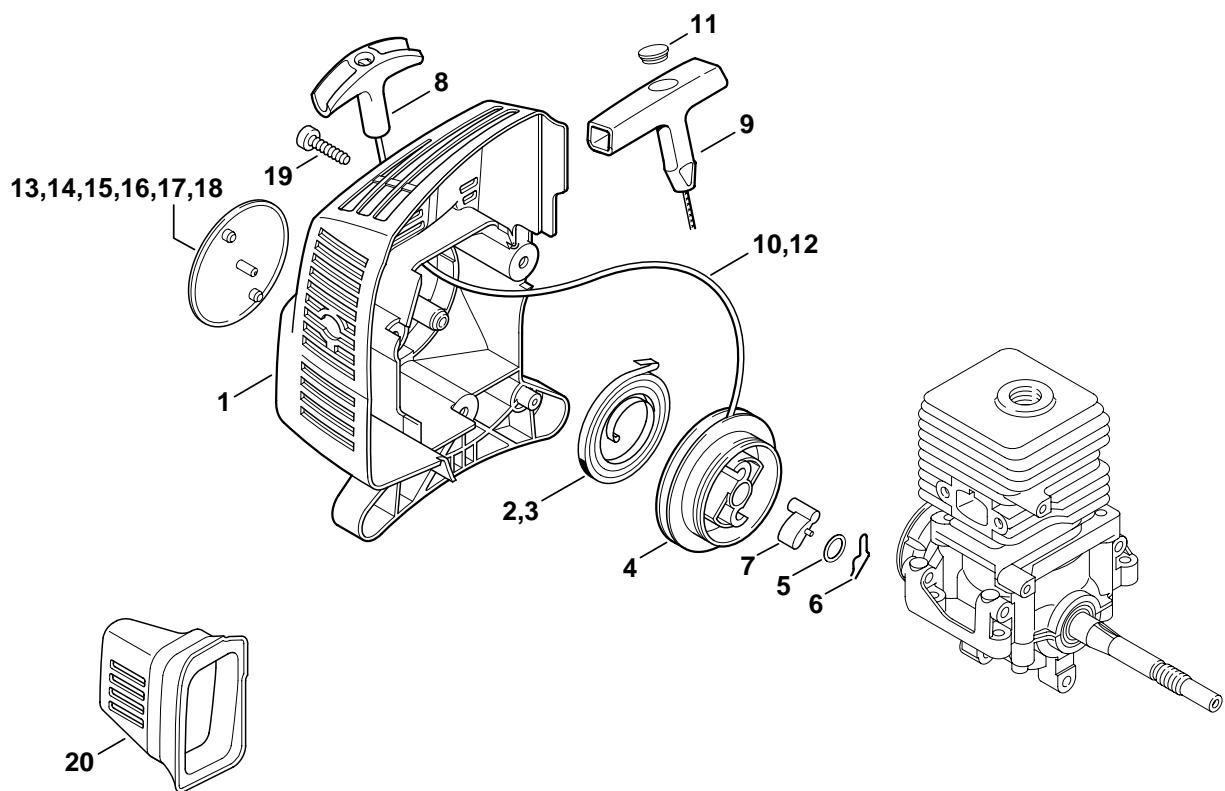

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

Illustration D


Muffler

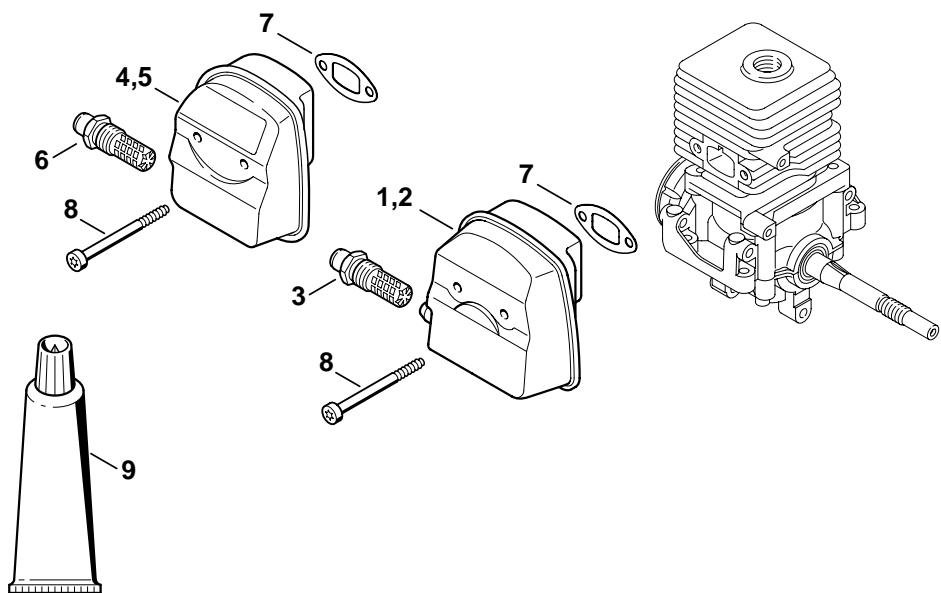

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

Illustration E


Muffler Cat.

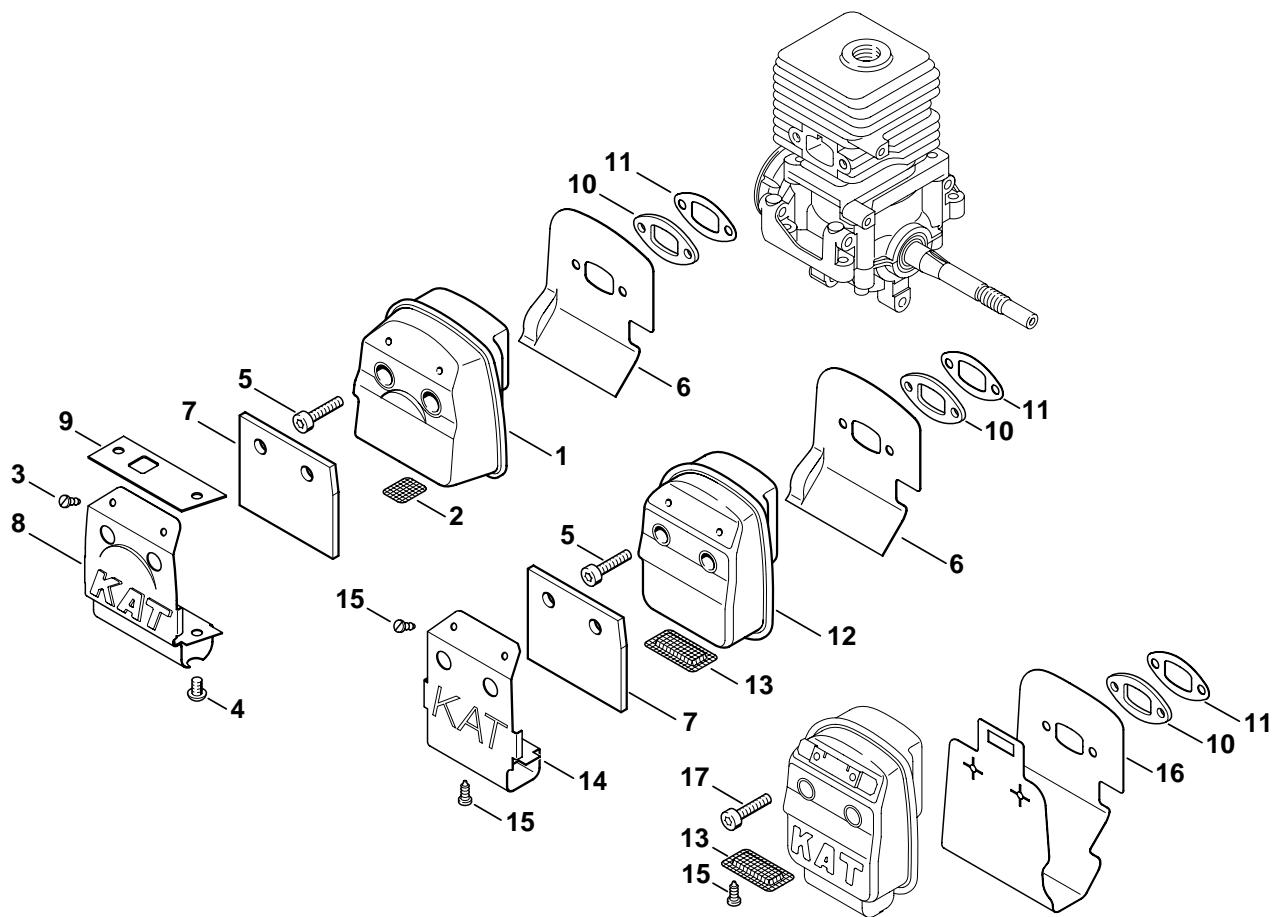

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

Illustration F


Ignition system, Clutch

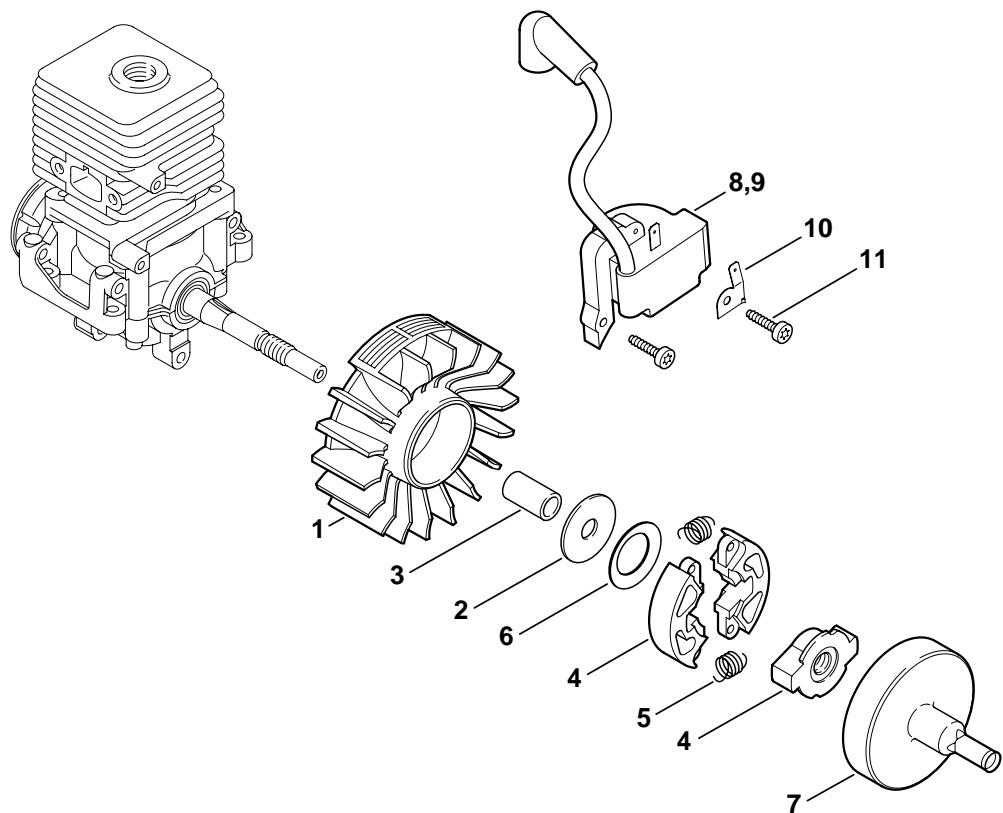

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

Illustration G

Engine housing (Wrap around handle)

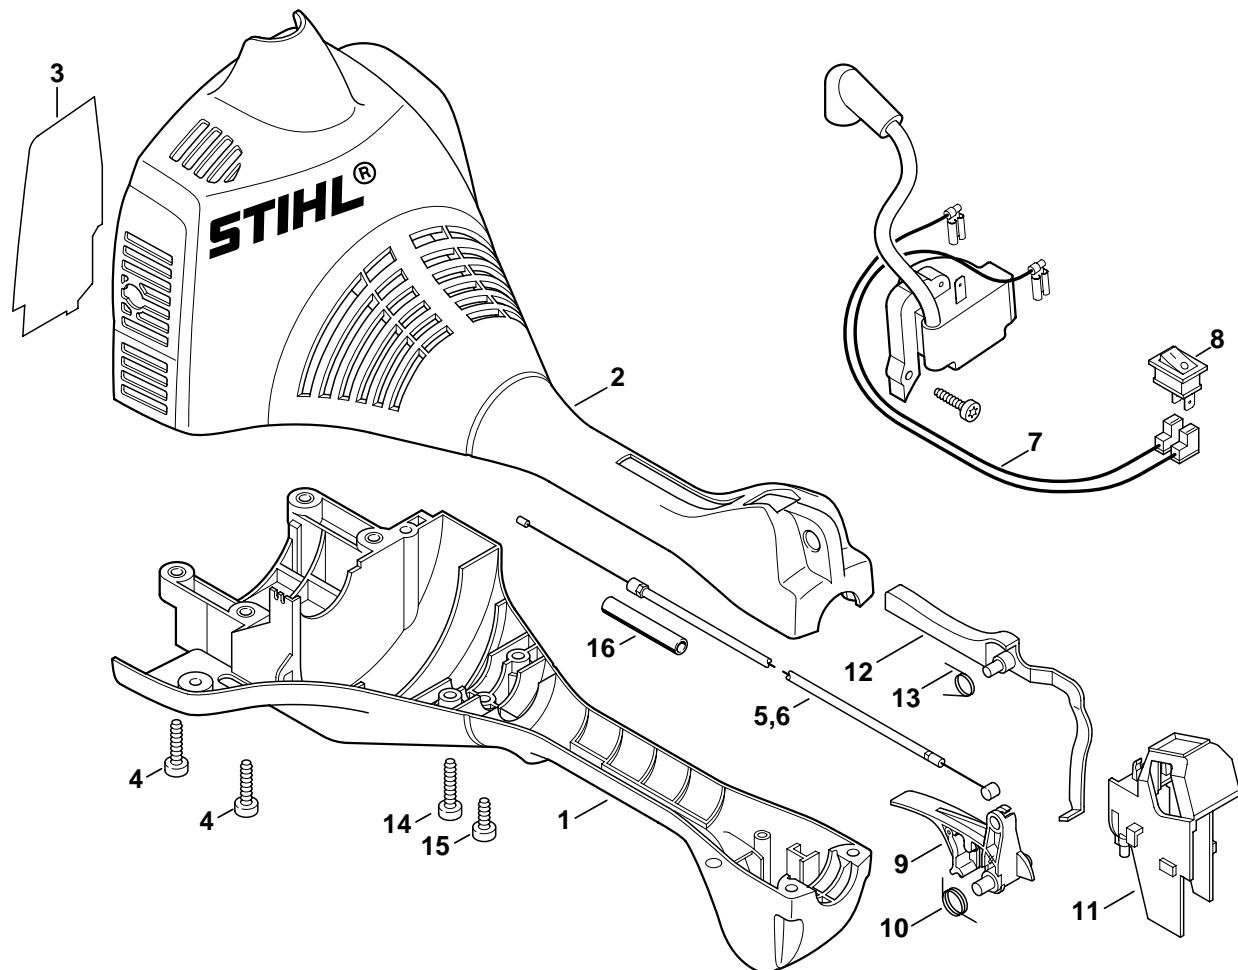

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC


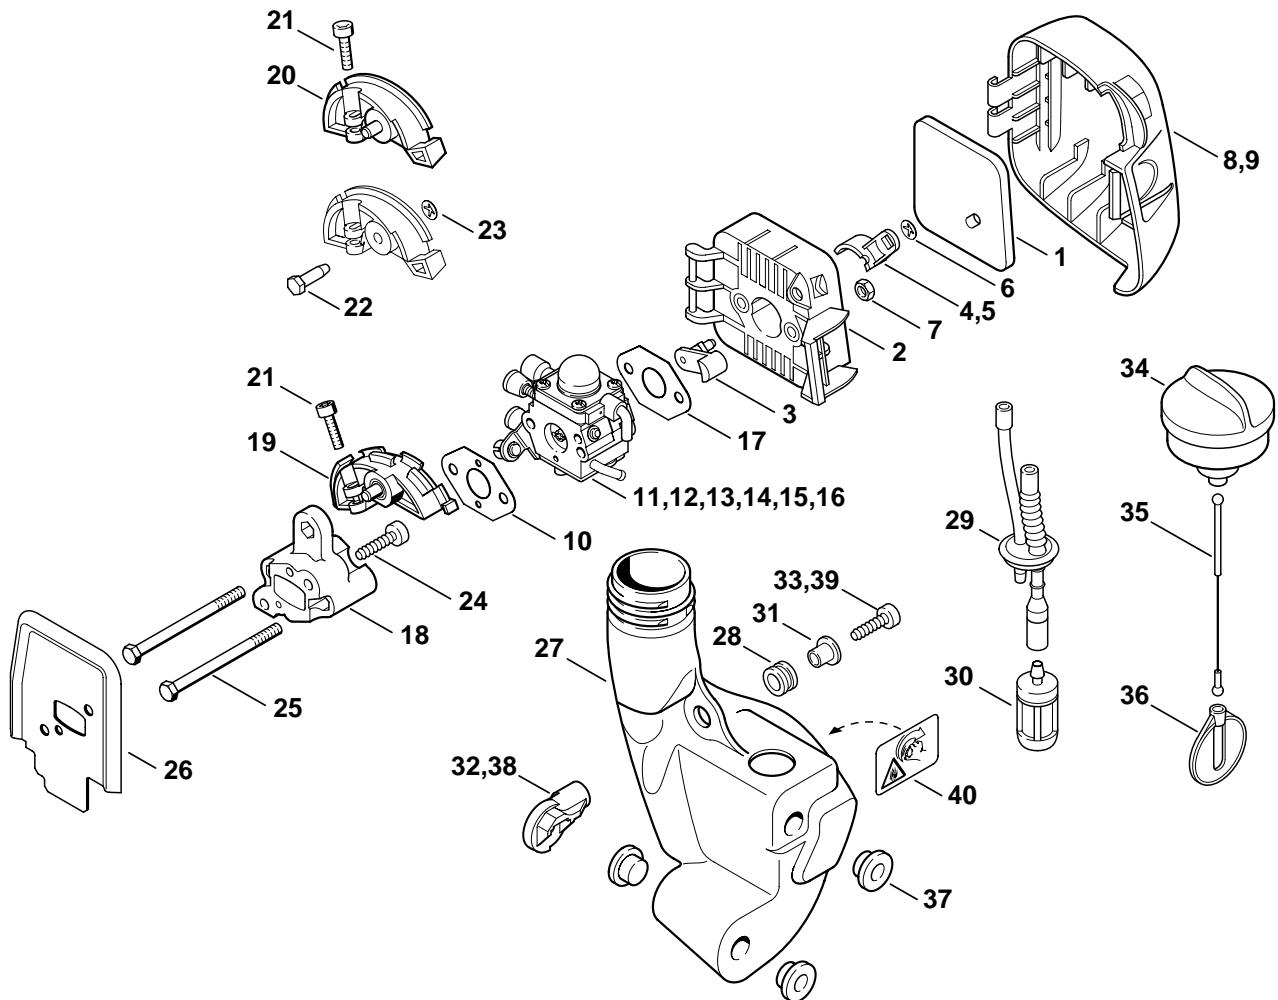


Illustration R

Drive tube assembly FS 55,
Wrap around handle

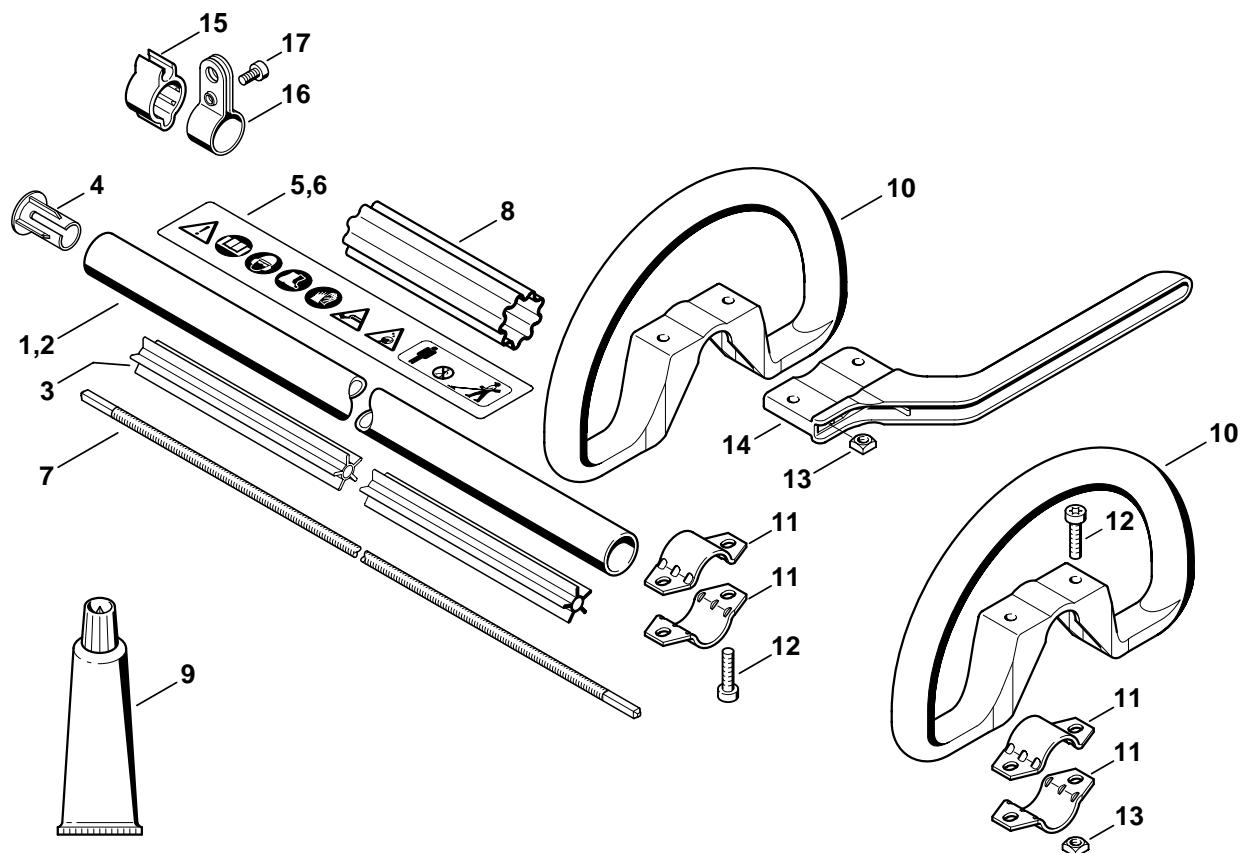


FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

Illustration S

Drive tube assembly


FS 55 T

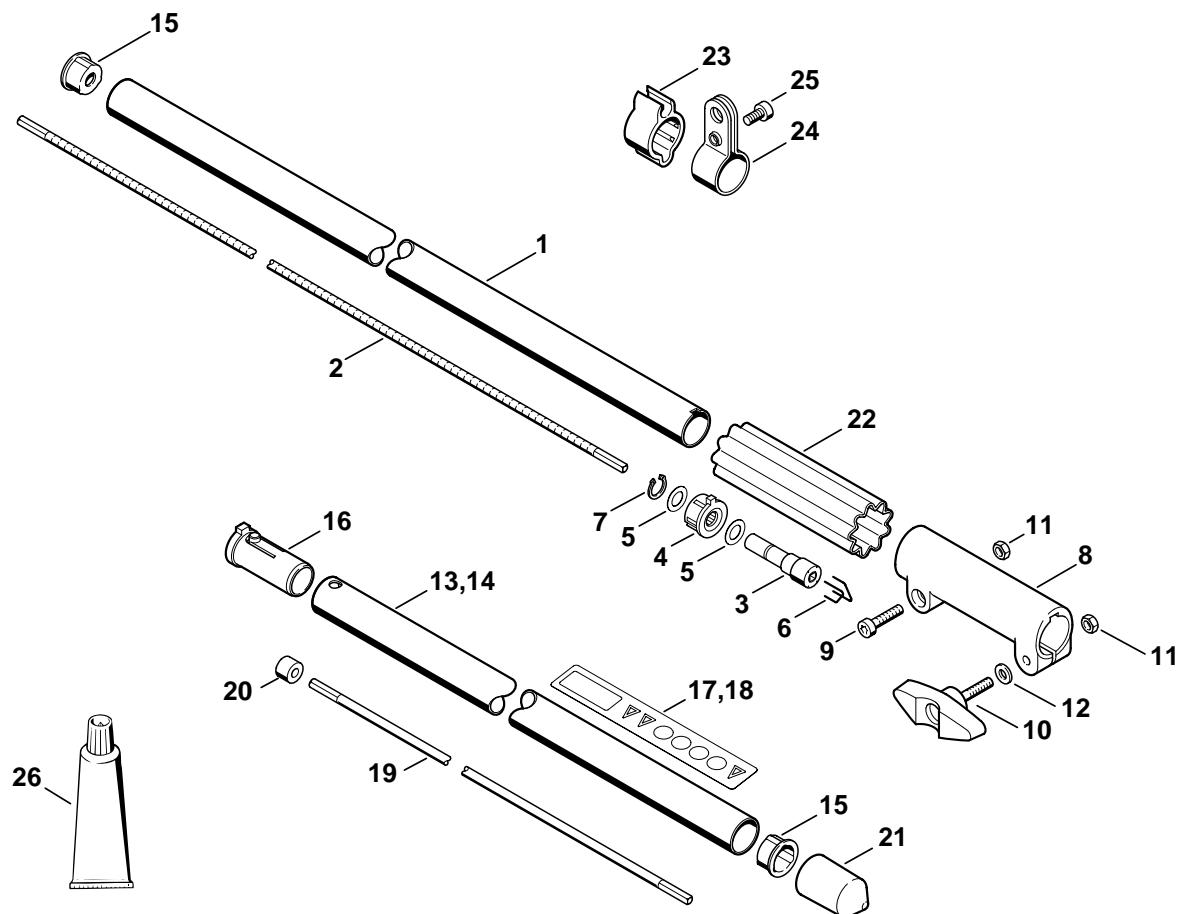

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

Illustration T


Two-handed handle bar

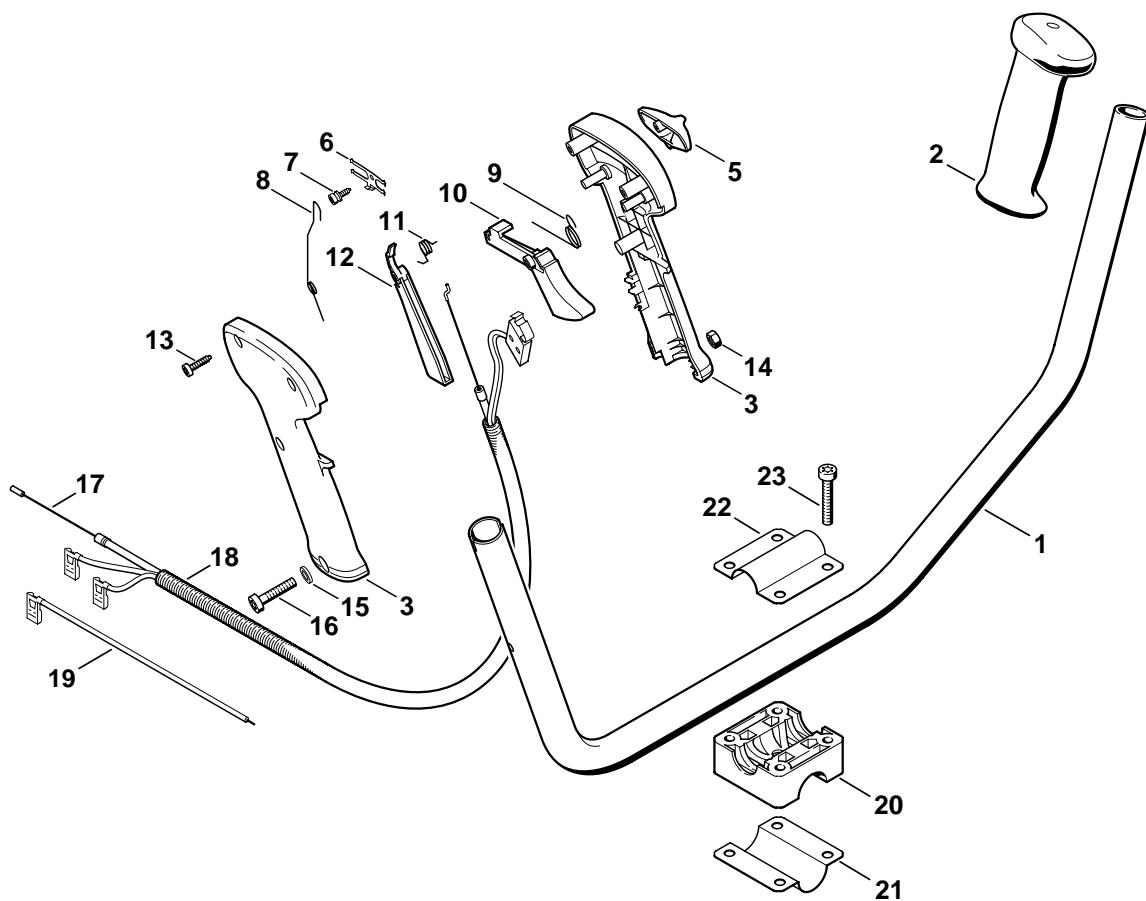

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

Illustration U

Two-handed handle bar

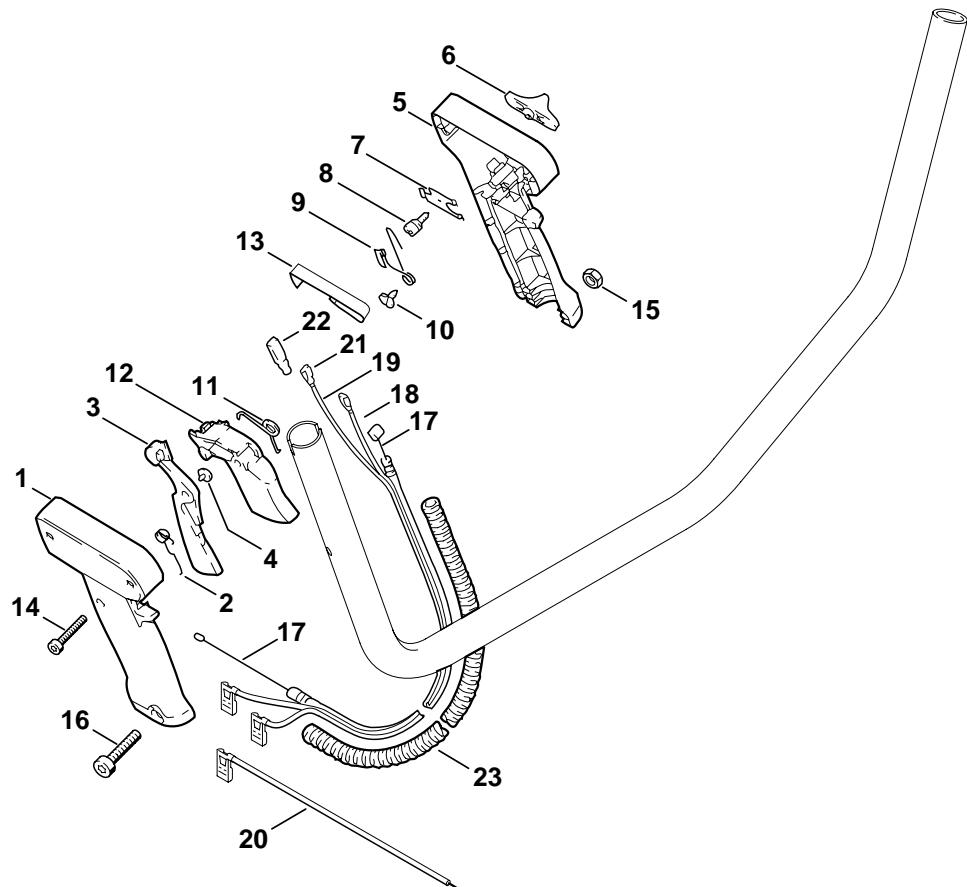

FS 55, FS 55 C, FS 55 R, FS 55 RC, FS 55 T, FS 55 TC

